 


Camera systems

 
- **Fixed camera system**

1. Display MD3071A
2. Camera MC3000B
(20,40,70,90,100 or 115 degree)
3. Cable MK24 (display/camera)
4. Optional extra camera with cable

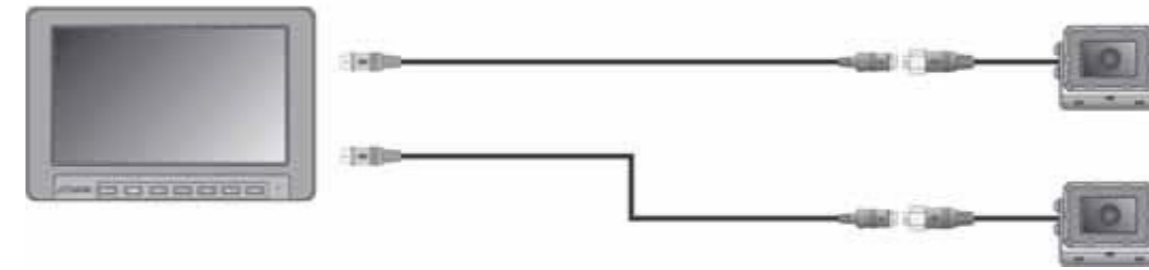

- **Fixed wireless camera system**


1. Display MD3071A
2. Camera MC3000B-4
(20,40,70,90,100 or 115 degree)
3. MVRD1000-RX Receiver
4. Cable MK496 (display/receiver)
5. MVRD1000-TX Transmitter
6. Cable MK761 (power transmitter)

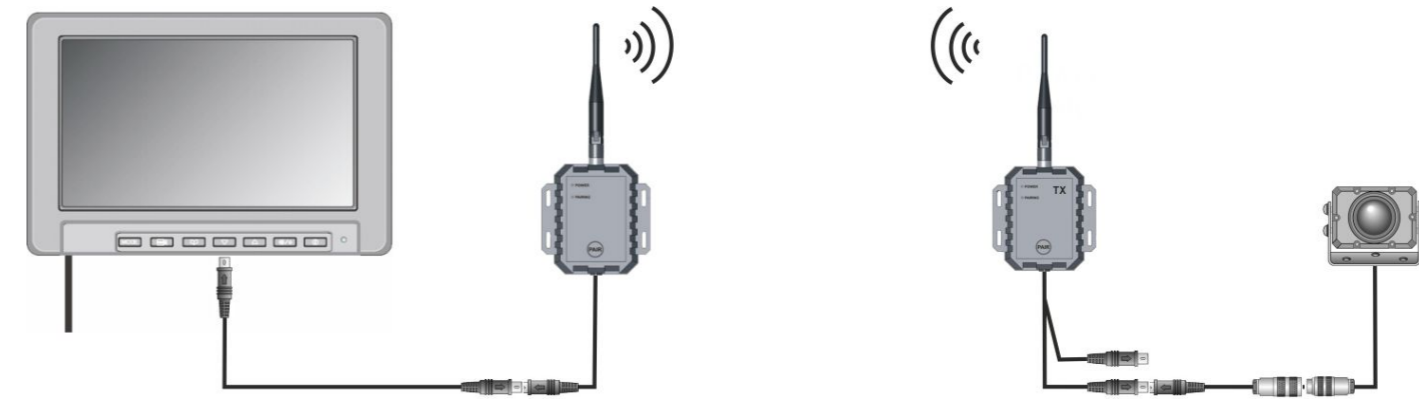

Camera systems


- **Zoom fixed camera system**

 1. Display MD3070A
2. MC5200-1 Zoom camera
3. MP5000-1 Pendule
4. MBE5200-1 Control unit
5. MK279 camera cable
6. MK73 display cable
7. Optional Camera MC3000B
(20,40,70,90,100 or 115 degree)
With cable MK24

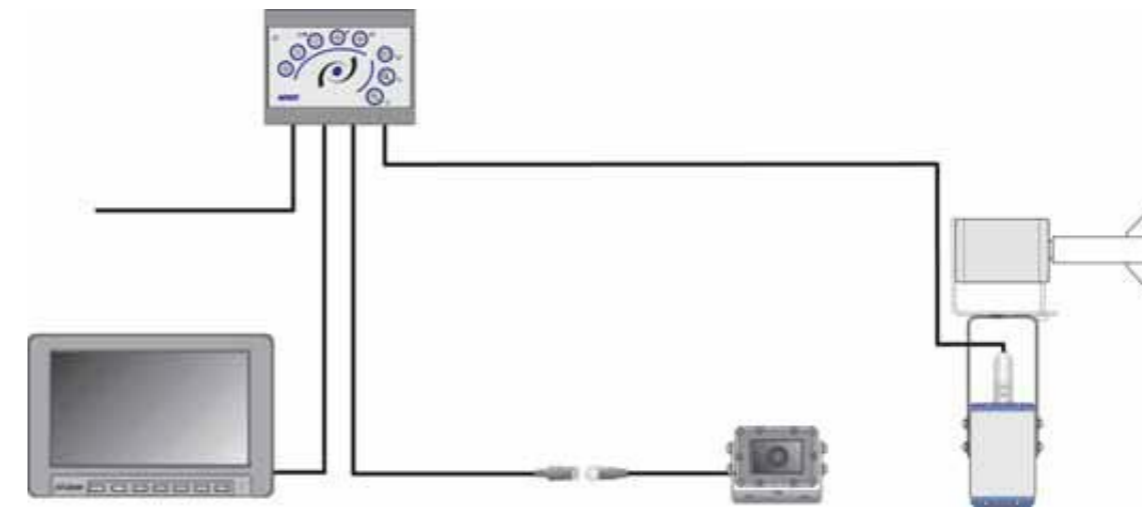

- **Zoom wireless camera system**

 
1. Display MD3070A
2. MC5200-1 Zoom camera
3. MP5000-1 Pendule
4. MBE5200-1 Control unit
5. MVR6000-RX Receiver
6. MVR6000-TX Transmitter
7. MK45 power cable transmitter
8. MK279 camera cable
9. MK73 display cable
10. Optional Camera MC3000B
(20,40,70,90,100 or 115 degree)
With cable MK24

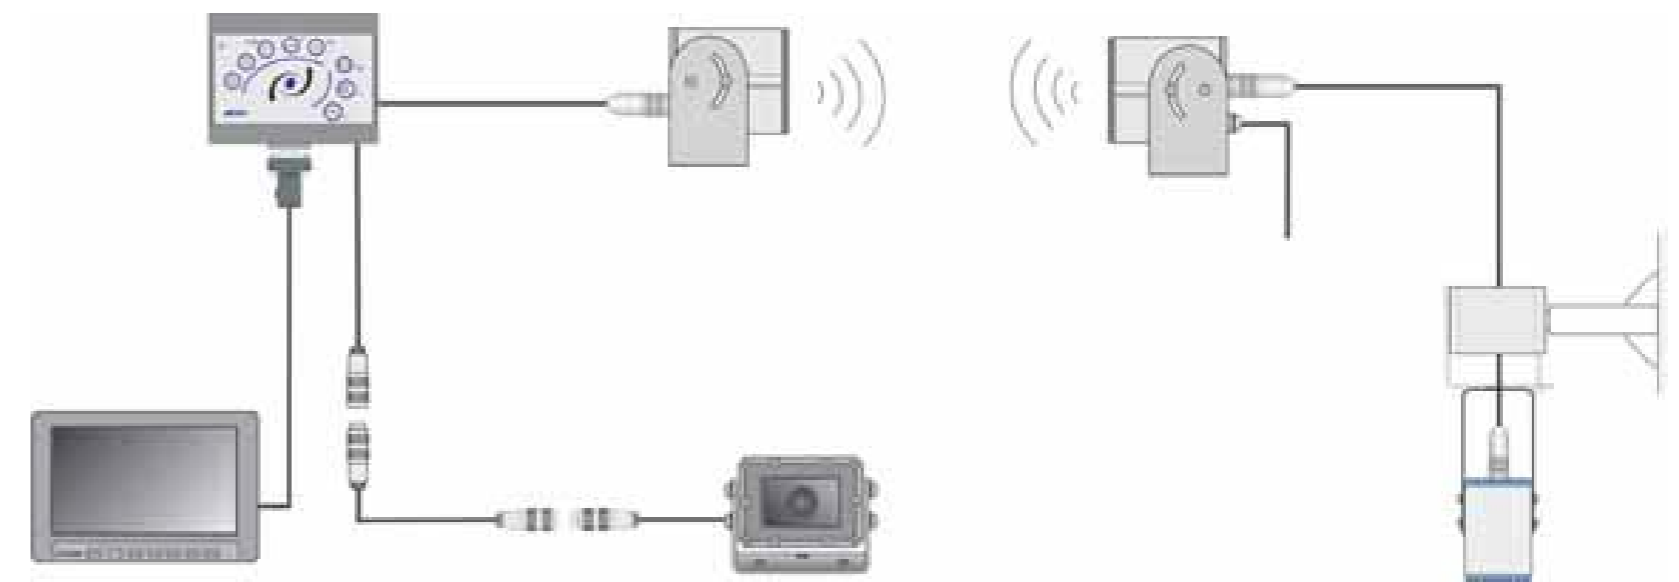

Camera systems

- **270 degree camera system**

 1. Display MD3071A-RAM-MH3
2. 3x Camera colour ¼" 180 degree
3. MVCD1000-13 Control unit
4. MK722.4 Cable 4 meter
5. MK723.4 Cable 4 meter
6. 3x MKS10 Camera Cable
7. Documentation

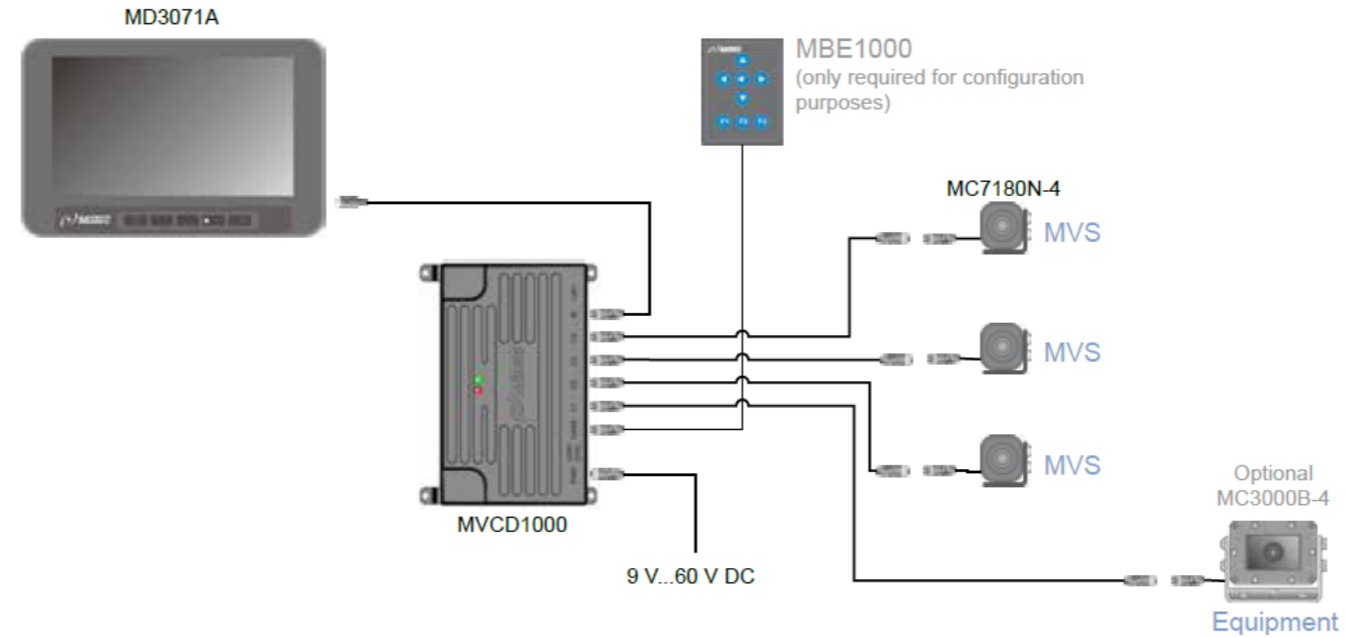

- **360 degree camera system**

1. Display MD3071A-RAM-MH3
2. 4x Camera colour ¼" 180 degree
3. MVCD1000-13 Control unit
4. MK722.4 Cable 4 meter
5. MK723.4 Cable 4 meter
6. 4x MKS10 Camera Cable
7. Documentation

